



Step Two: Setting up your Panel Dialers



Default Room
(set on TS/TSW)

From 3.17 Panel
shows in Setup
App

Load TS/TSW Dialer to same
room.

Set name temporarily to
indicate room name.


Set the extension for this dialer.
This should be the extension for the physical
panel located in this room.

NB: the crestron home app should be
defaulted as detailed in step 1.

Set final driver name to
indicate functionality.

NB: do not show on home
page.

User will be presented with
all other extensions in the
system.

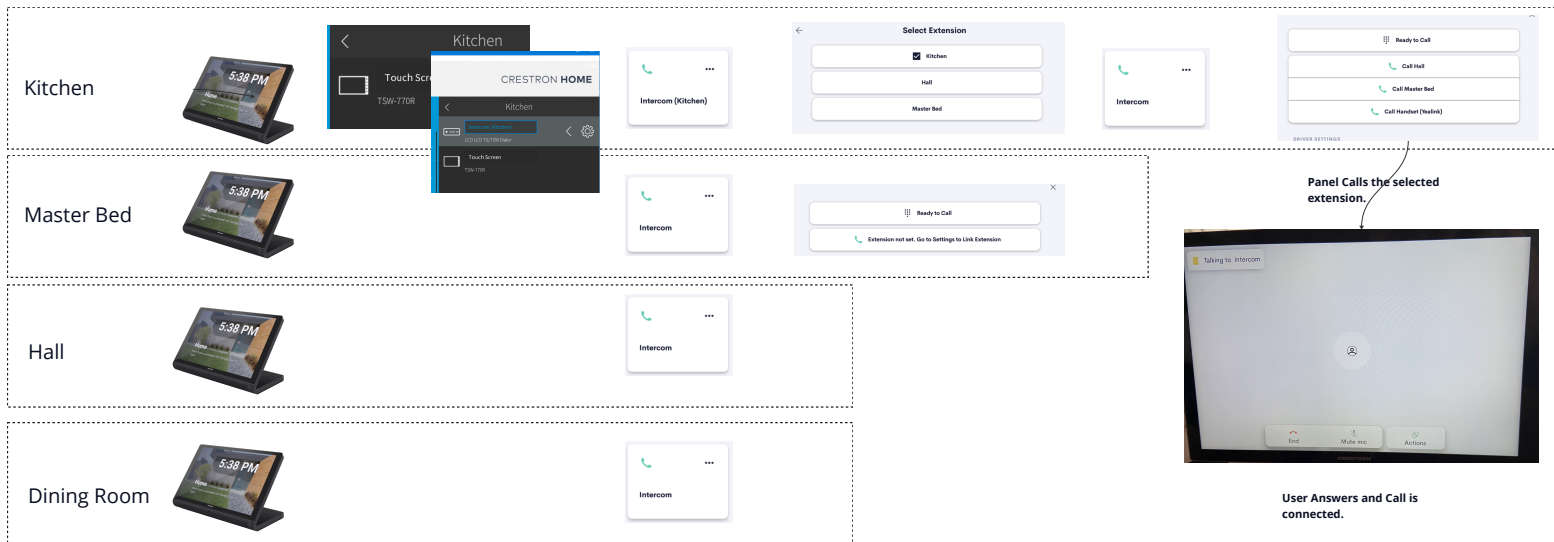

User Answers and Call is
connected.

NB: On our original system the call flow required the user initiating the call to also accept the call at that panel. Systems with this functionality can be upgraded to the new flow free of charge.